



Illuminated
button
spring-return

Illuminated
button
spring-return

Non-illuminated
button
spring-return

2 position key
selector switch

Illuminated
selector switch
3 positions

Emergency
push button

	Contacts	Diagram
Device 1	1NO	A1 — A4 A2 — A3 LED
Device 2	1NO	A1 — A5 A6 — A3 LED
Device 3	1NO	A1 — A7 A12 — A3 LED
Device 4	1NO	B1 — B4 B2 — B3 LED
Device 5	2NO	B1 — B5 B1 — B12 B6 — B3 LED
Device 6	2NC	B8 — B9 B10 — B11 LED

